6. ERSATZTEILLISTE

Inhalt

Abbildung	Seite
ÜBERBLICK	3
ZEICHNUNG 1: CABINET ASSY	4
LISTE 1: CABINET ASSY	5
ZEICHNUNG 2: CONTROL ASSY FX050	6
ZEICHNUNG 2: CONTROL ASSY FX151	7
ZEICHNUNG 2: CONTROL ASSY FX175	8
LISTE 2: CONTROL ASSY	9
ZEICHNUNG 3: PRINTER ASSY	10
LISTE 3: PRINTER ASSY	11
ZEICHNUNG 4: BASE ASSY	12
LISTE 4: BASE ASSY	13
ZEICHNUNG 5: SCAN UNIT	14
LISTE 5: SCAN UNIT	15
ZEICHNUNG 6: PAPER GUIDE U ASSY	16
LISTE 6: PAPER GUIDE U ASSY	17
ZEICHNUNG 7: CABLES	18
LISTE 7: CABLES	19

ÜBERBLICK

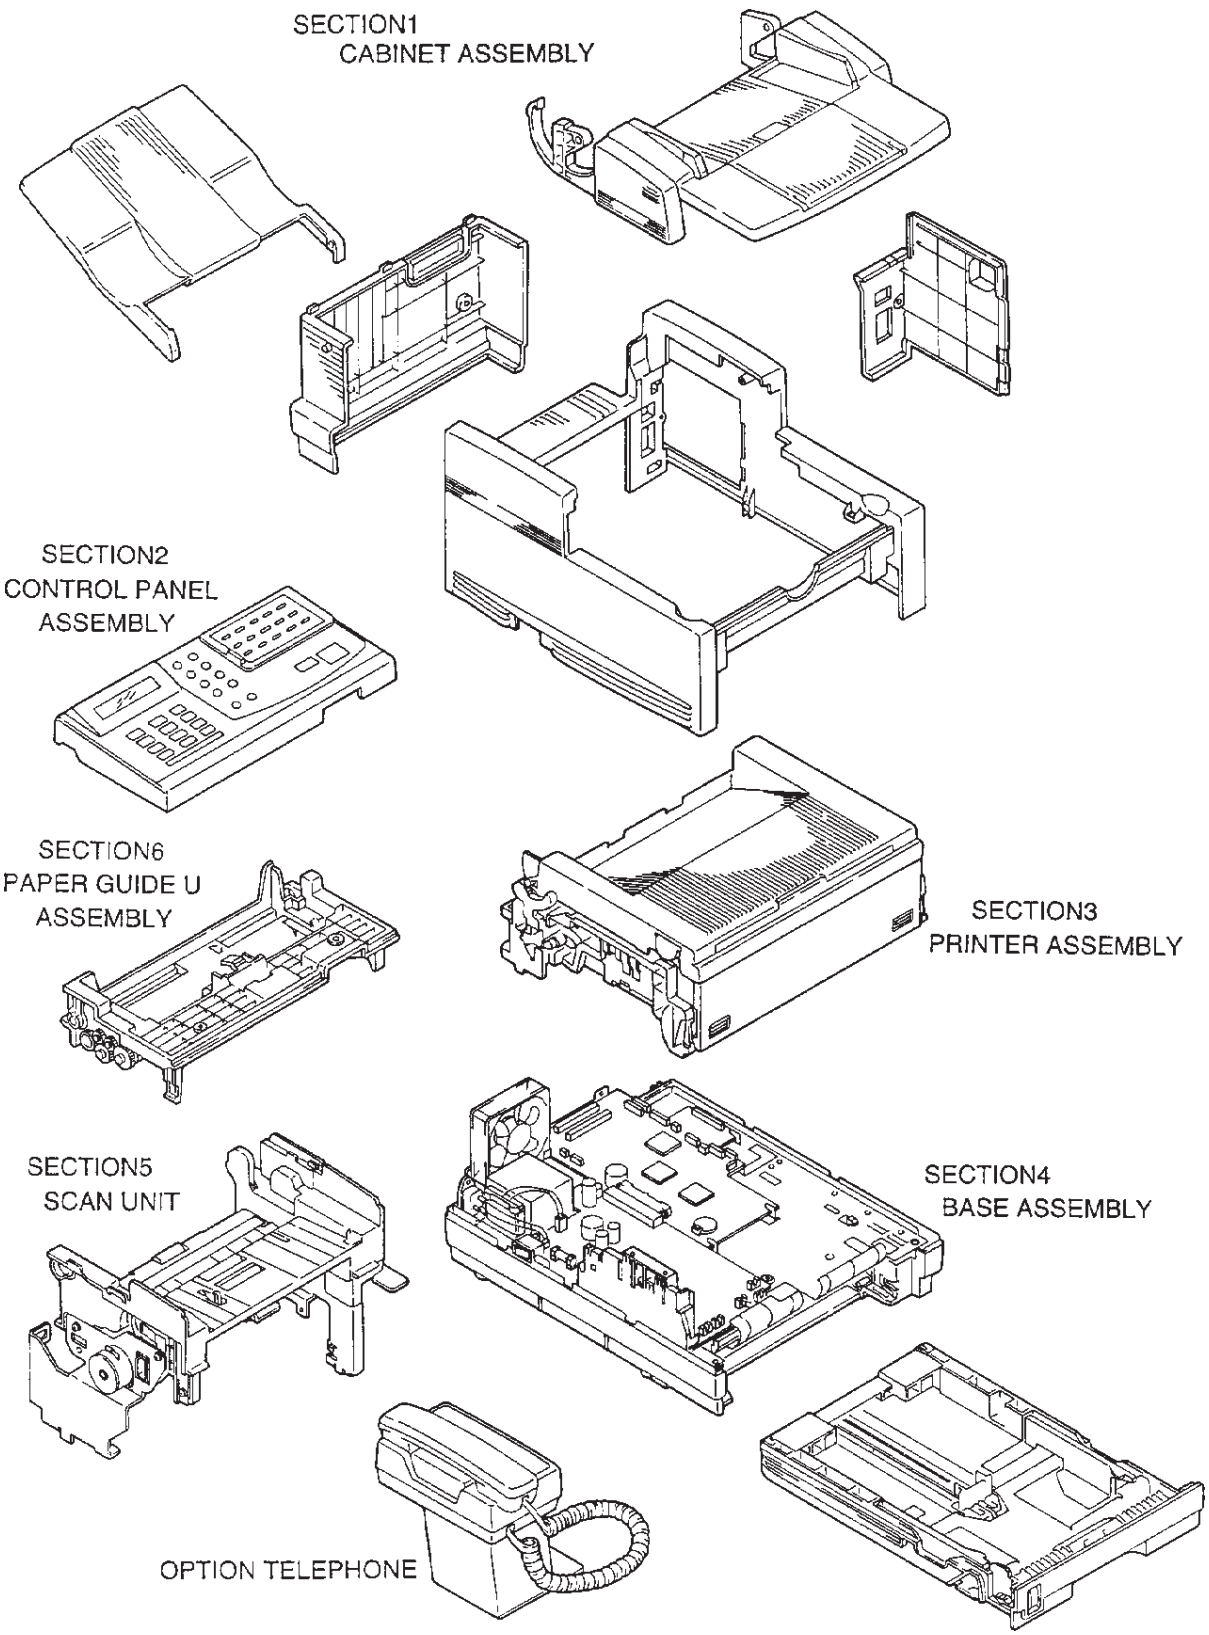
SECTION1
CABINET ASSEMBLY
SECTION2
CONTROL PANEL
ASSEMBLY
SECTION6
PAPER GUIDE U
ASSEMBLY
SECTION3
PRINTER ASSEMBLY
SECTION5
SCAN UNIT
SECTION4
BASE ASSEMBLY
OPTION TELEPHONE

ZEICHNUNG 1: CABINET ASSY

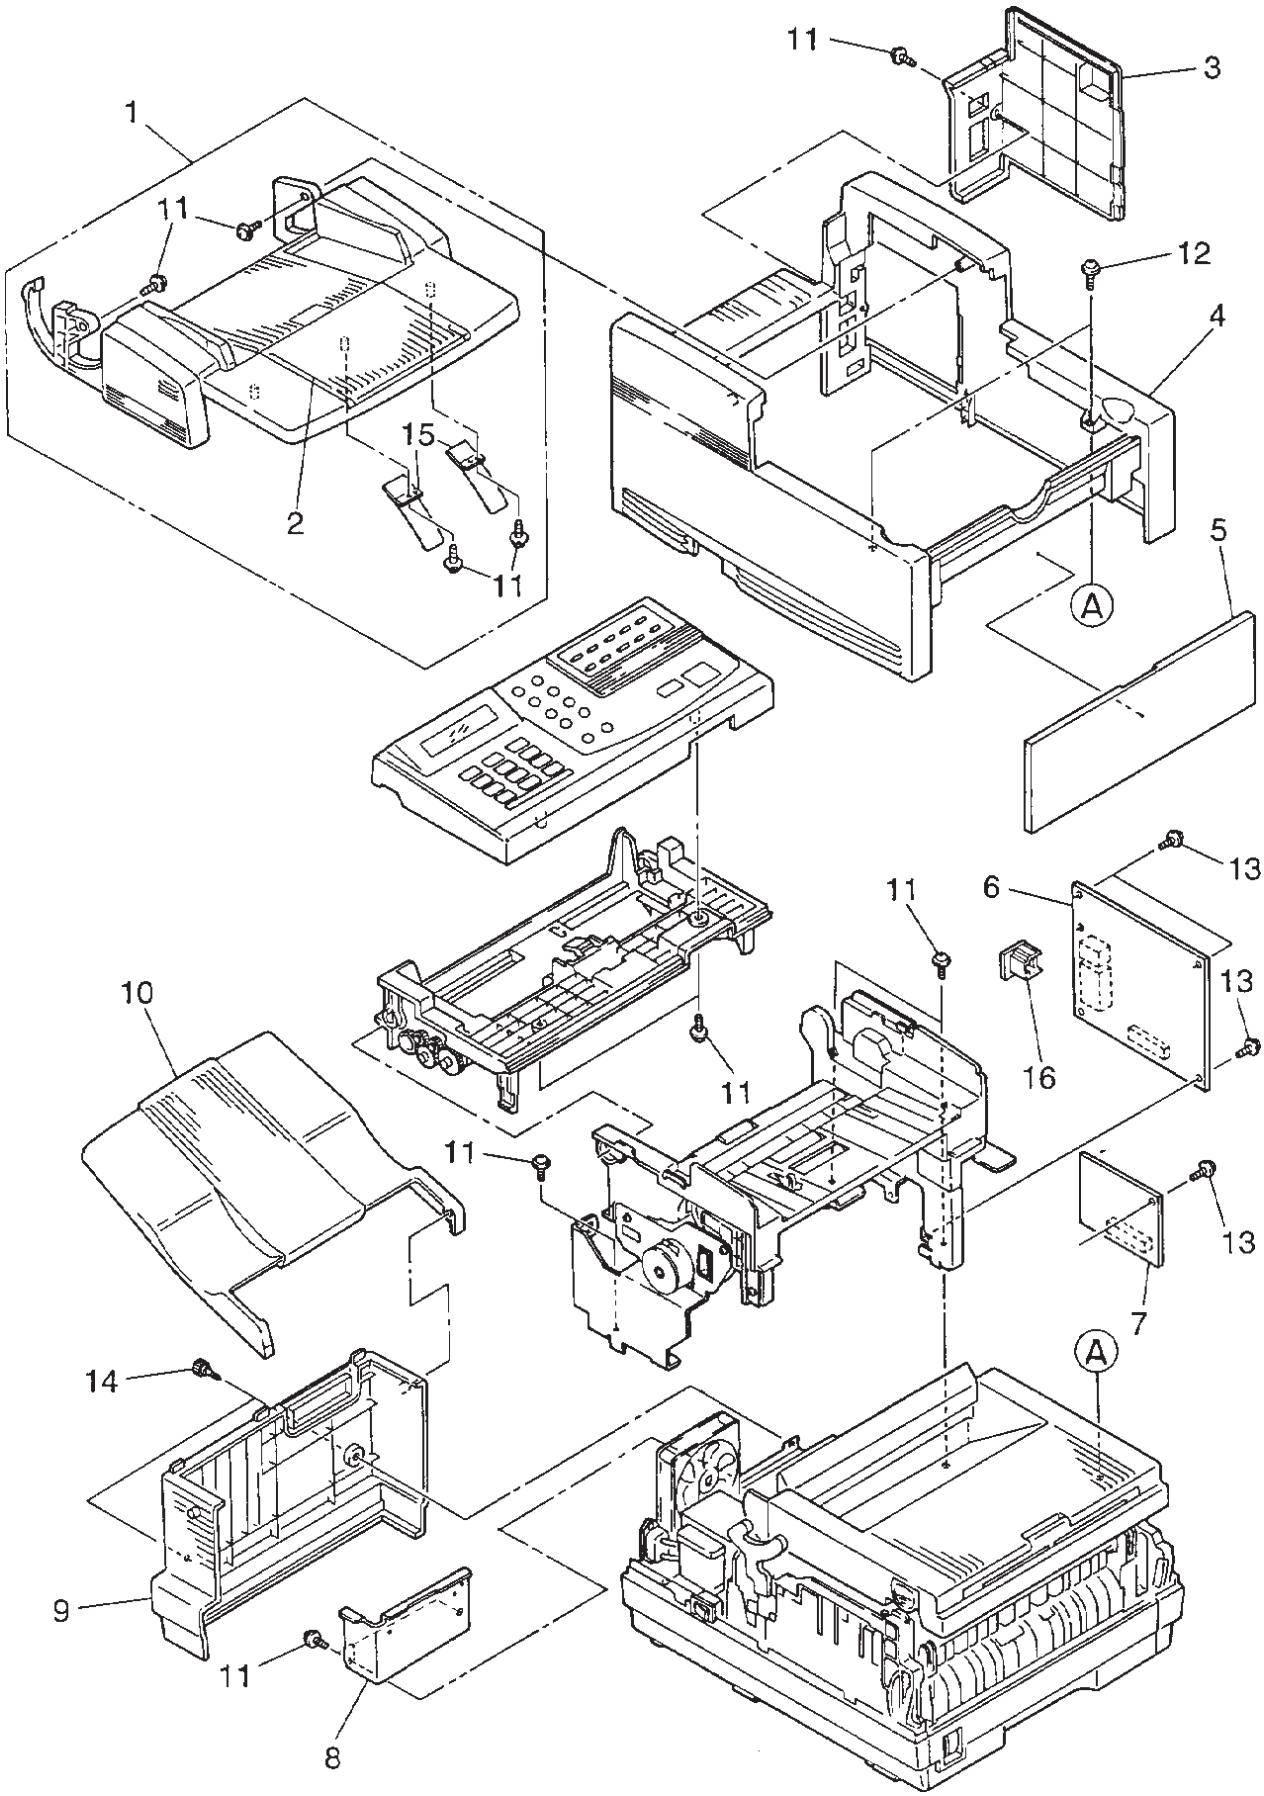

LISTE 1: CABINET ASSY

NR.	BEZEICHNUNG	BESTELL-NR.
1	DOCUMENT HOPPER ASSY	1PA4120-1079G1
2	SUB HOPPER	2PP4120-1084P1
3	NCU COVER	2PP4120-1091P1
4	MAIN COVER	1PP4120-1089P1
5	FRONT COVER	1PP4120-1092P1
6	NCU PCB ASSY (INT.)	4YA4129-1010G11
6	NCU PCB ASSY (GER)	4YA4129-1009G1
7	MODEM PCB 9.6K	4YA4135-1032G1
7	MODEM PCB 14.4K	4YA4135-1032G2
8	PARTITION PLATE	3PP4120-1088P1
9	REAR COVER	1PP4120-1090P1
10	STACKER	1PP4120-1093P1
11	SCREW	+BTD3-8-IOF
12	SCREW	4PB4083-2500P10
13	SCREW	4PB4013-3102P2
14	KNOB SCREW	4PB4120-1136P1
15	ASSIST GUIDE	4PP4120-1161G1
16	DUST COVER	223A7010P0003

ZEICHNUNG 2: CONTROL ASSY FX050

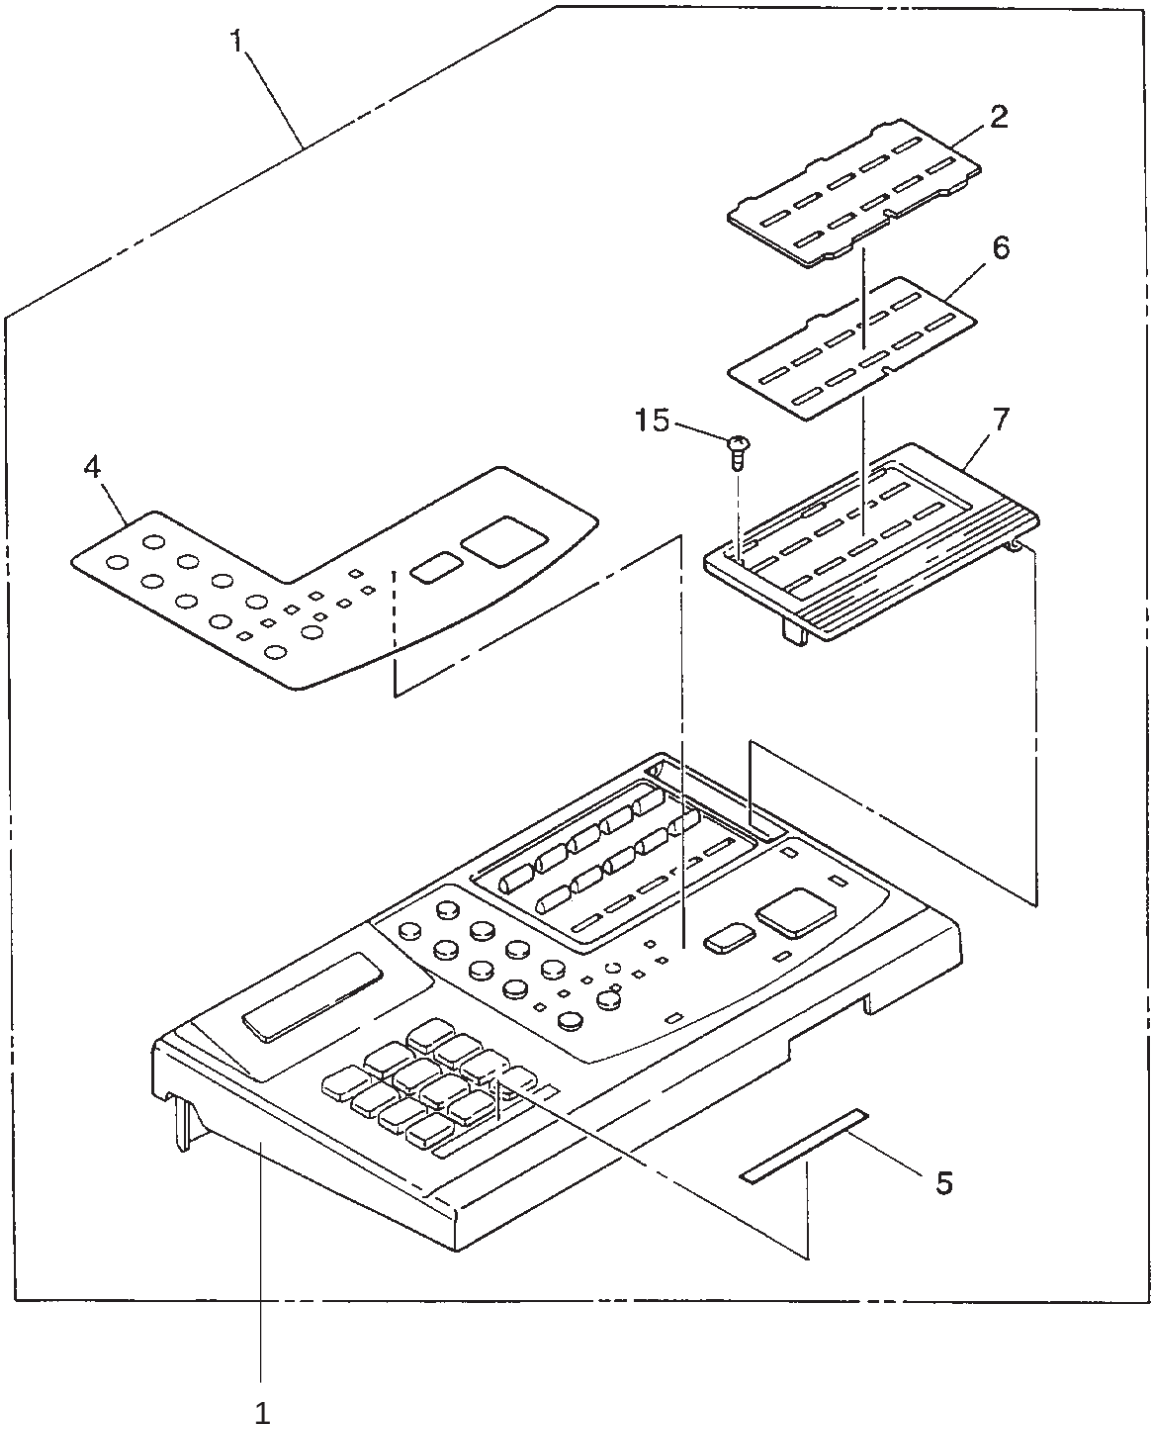

ZEICHNUNG 2: CONTROL ASSY FX151

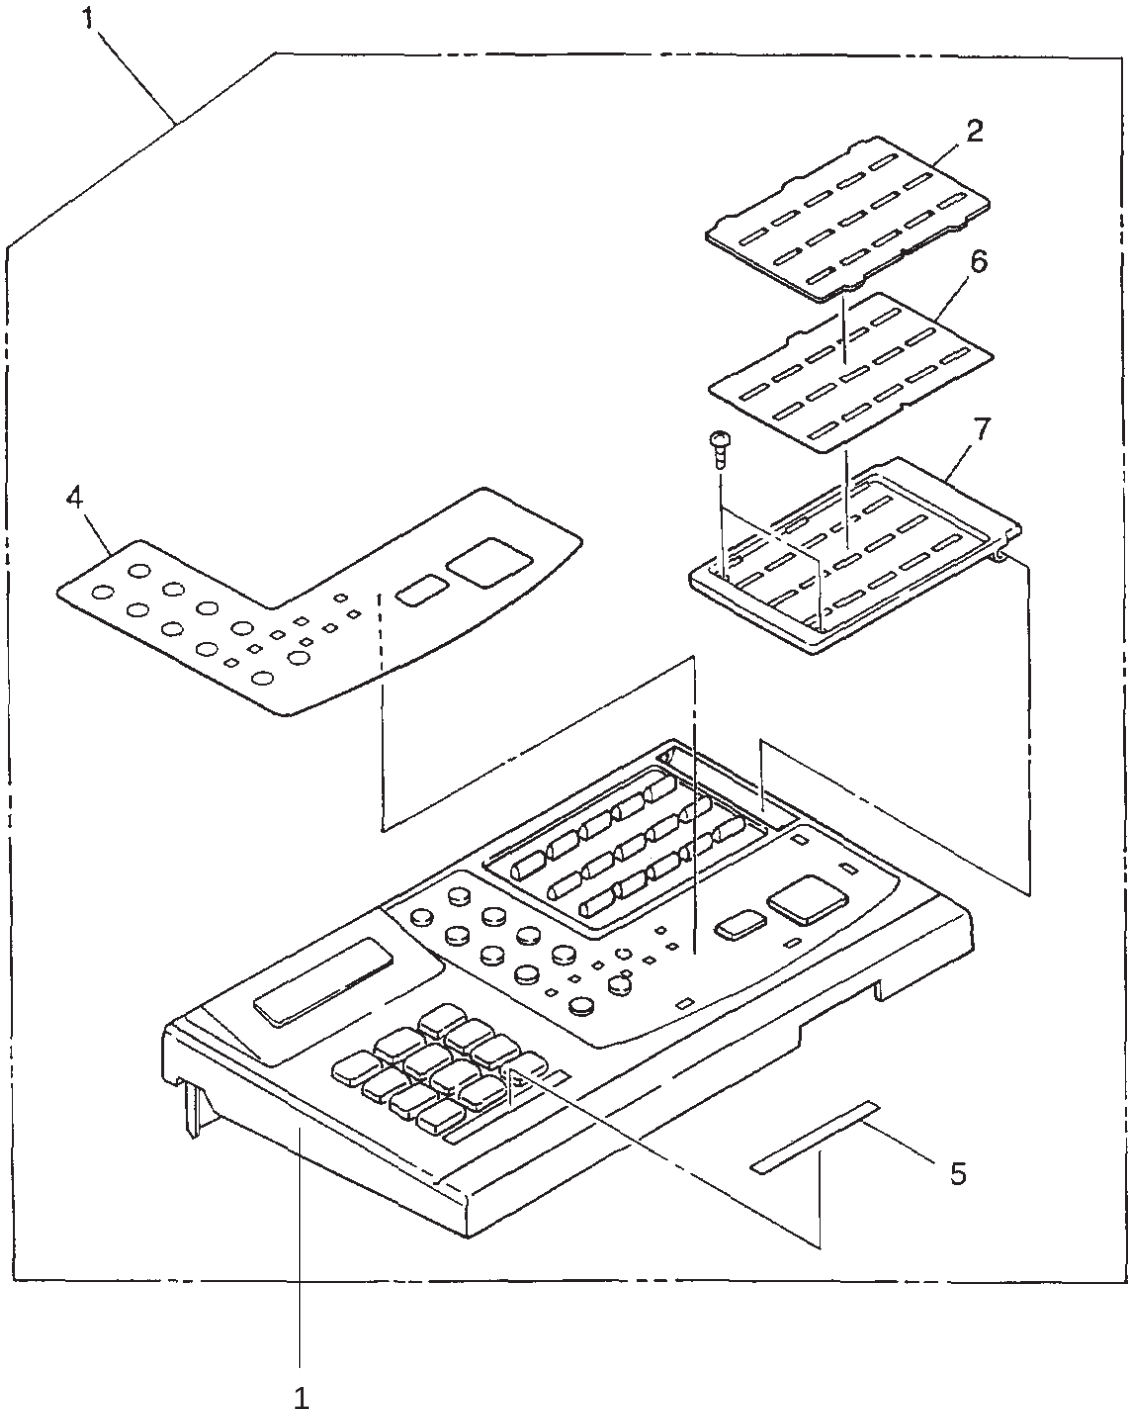

ZEICHNUNG 2: CONTROL ASSY FX175

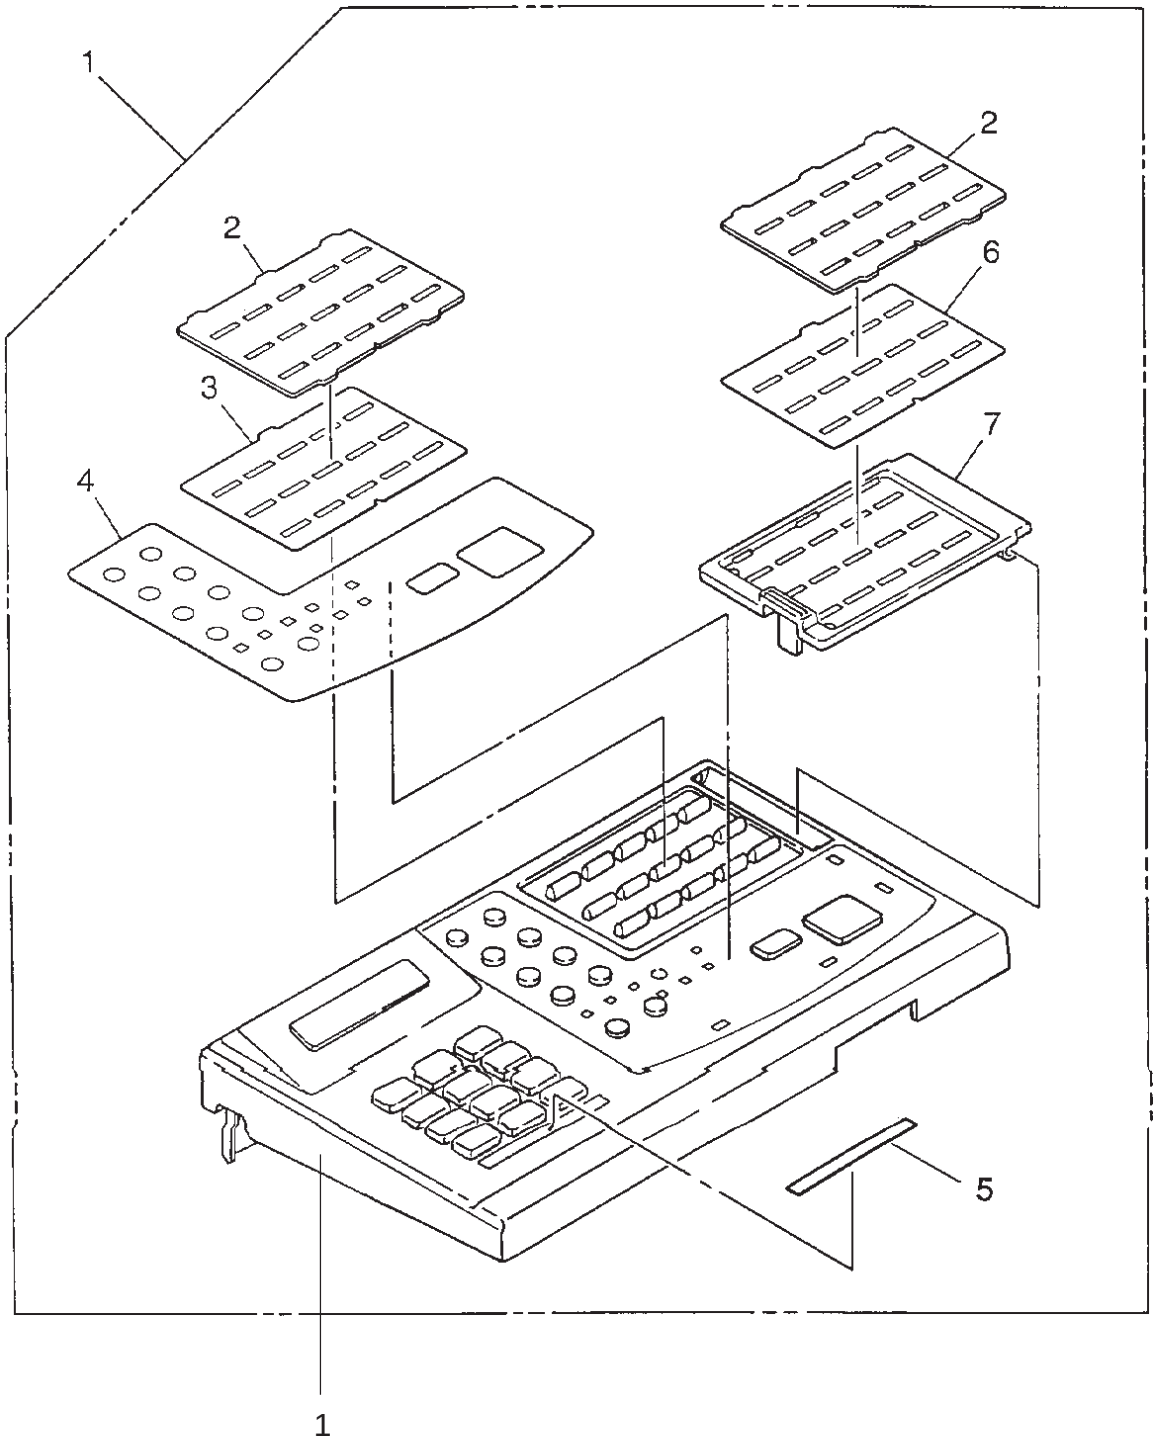

LISTE 2: CONTROL ASSY

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	OPE UNIT (ENTHÄLT NR. 7)	4YA4120-1056G1	FX050
	OPE UNIT (ENTHÄLT NR. 7)	4YA4120-1056G101	FX151
	OPE UNIT (ENTHÄLT NR. 7)	4YA4120-1056G201	FX175
2	ONE-TOUCH COVER FILM	4PB4120-1102P1	FX050
	ONE-TOUCH COVER FILM	4PB4120-1074P1	FX151/FX175
3	ONE-TOUCH SHEET, GER	4PB4120-1073P102	FX175
	ONE-TOUCH SHEET, INT	4PB4120-1073P101	FX175
4	FUNCTION SHEET, GER	3PB4120-1070P002	FX050
	FUNCTION SHEET, INT	3PB4120-1070P001	FX050
	FUNCTION SHEET, GER	3PB4120-1070P102	FX151
	FUNCTION SHEET, INT	3PB4120-1070P101	FX151
	FUNCTION SHEET, GER	3PB4120-1070P202	FX175
	FUNCTION SHEET, INT	3PB4120-1070P201	FX175
5	TEN KEY LABEL, GER	4PB4014-4776P221	
	TEN KEY LABEL, INT	4PB4014-4776P211	
6	ONE-TOUCH SHEET, GER	4PB4120-1101P002	FX050
	ONE-TOUCH SHEET, INT	4PB4120-1101P001	FX050
	ONE-TOUCH SHEET, GER	4PB4120-1073P002	FX151/FX175
	ONE-TOUCH SHEET, INT	4PB4120-1073P001	FX151/FX175
7	ONE-TOUCH COVER	1PP4120-1112P1	FX050
	ONE-TOUCH COVER	1PP4120-1111P1	FX151
	ONE-TOUCH COVER	1PP4120-1072P1	FX175

ZEICHNUNG 3: PRINTER ASSY

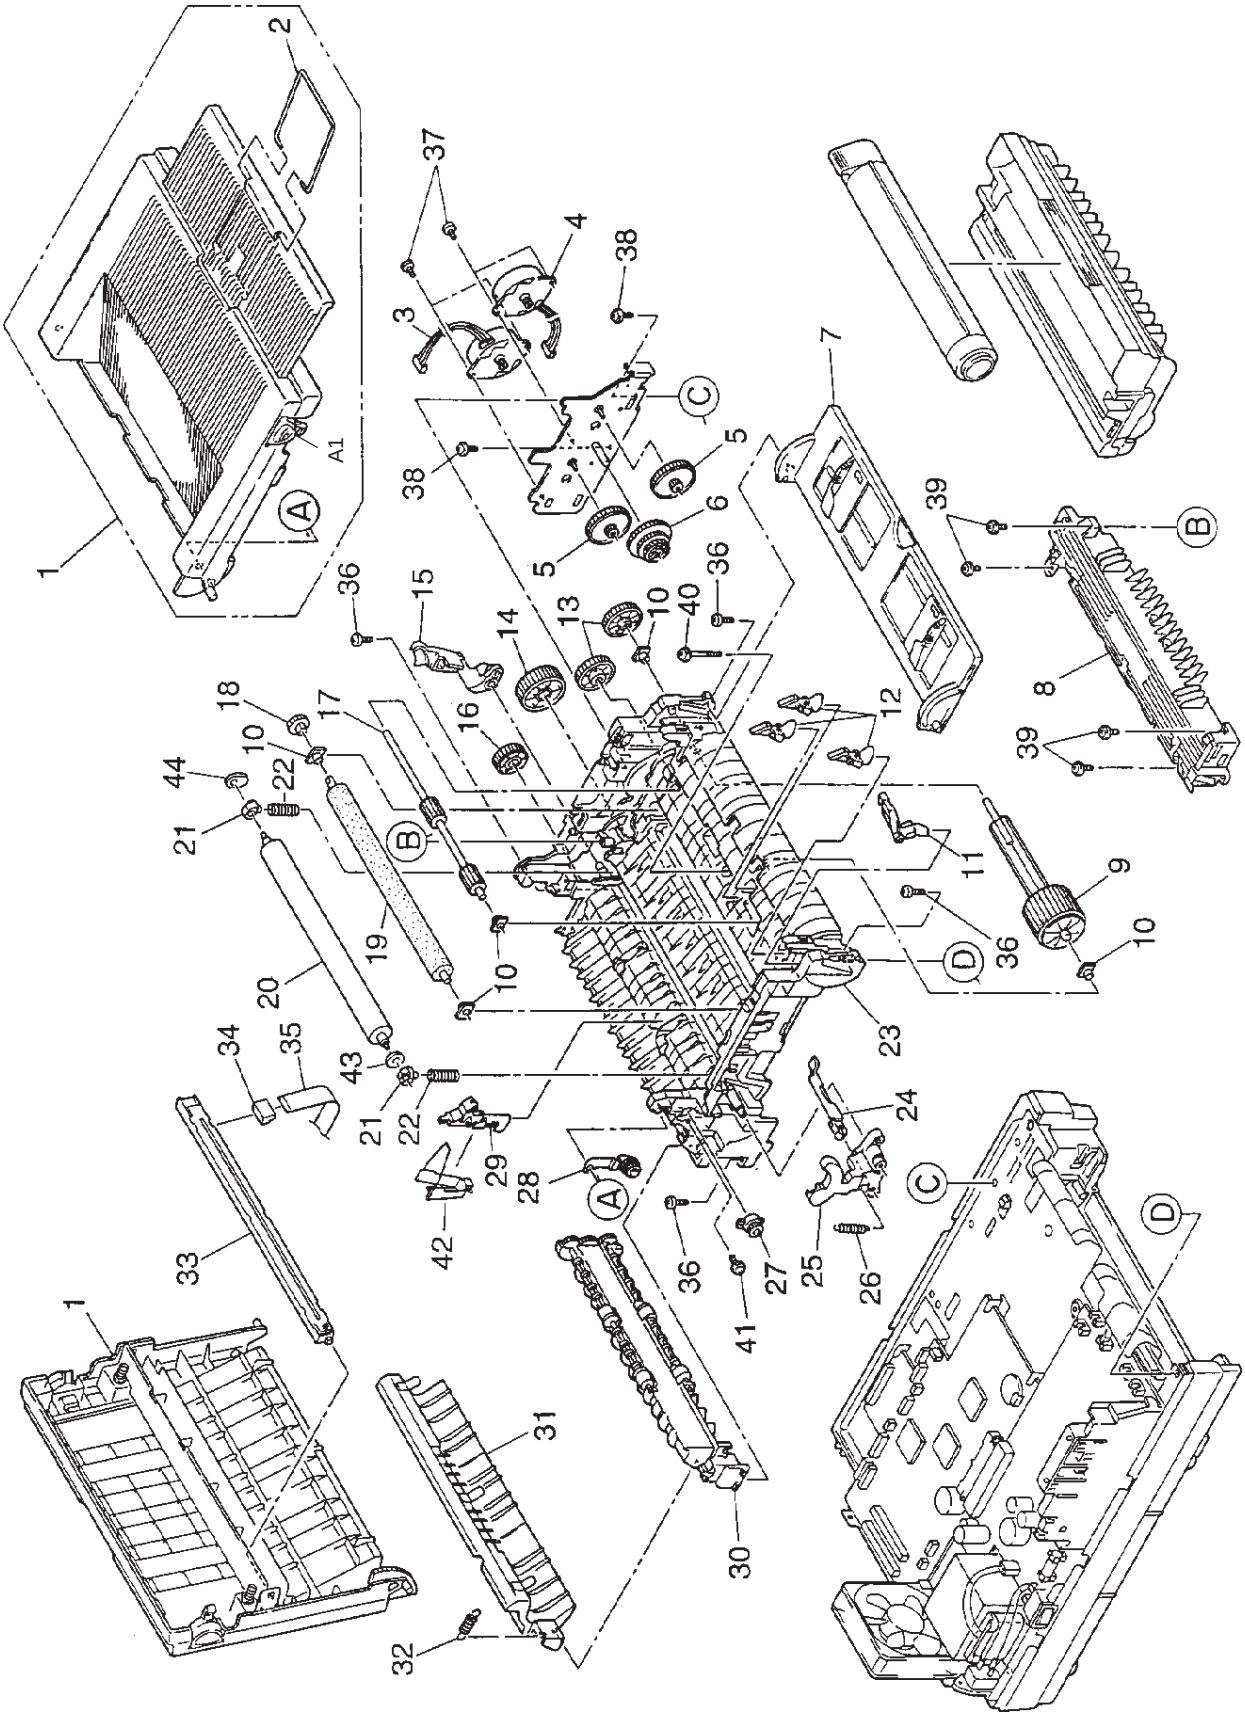

LISTE 3: PRINTER ASSY

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	STACKER COVER ASSY	2PA4083-6160G8	
1A	STACKER COVER HOLDER KNOB	2PP4120-1199P1	
2	GUIDE WIRE	4PB3517-1567P1	
3	PULSE MOTOR	4PB4122-1243P3	FX050
	PULSE MOTOR	4YB4120-1117P1	FX151/FX175
4	PULSE MOTOR	4PB4122-1243P2	FX050
	PULSE MOTOR	4YB4120-1118P1	FX151/FX175
5	IDLE GEAR (Z90/16)	4PP4083-2593P1	
6	REDUCE SPEED GEAR	3PP4083-6076P1	
7	MANUAL FEED GUIDE ASSY	2PA4083-6130G1	FX151/FX175
8	FUSING UNIT ASSY	2YX4120-1128G2	
9	HOPPING ROLLER ASSY	3PA4122-1295G1	
10	BEARING	4PP4083-6022P2	
11	TONER SENSOR (ADHESIVE)	4PP4083-6086G1	
12	SENSOR PLATE (INLET)	4PP4083-6083P1	
13	ONE-WAY CLUTCH GEAR	4PB4083-6024P1	
14	IDLE GEAR (Z36)	4PP4083-6080P1	
15	RESET LEVER (R)	3PP4083-6054P1	
16	IDLE GEAR (Z22)	4PP4083-6081P1	
17	RESIST ROLLER (F)	3PB4122-1281P1	
18	TR GEAR	4PP4083-6042P1	
19	TRANSFER ROLLER	3YB4083-7640P1	
20	BACK UP ROLLER	3PB4083-6064P2	
21	BUSH	4PP4083-6052P1	
22	BIAS SPRING	4PP4083-6065P1	
23	LOWER BASE SUB ASSY	1PA4120-1157G1	
24	SWITCH ARM	3PP4083-6058P1	
25	RESET LEVER (L)	3PP4083-6053P1	
26	RESET SPRING	4PP4083-6057P1	
27	DUMPER	4PB4083-6197P1	
28	DUMPER ARM	4PP4083-6191G1	
29	SENSOR PLATE (OUTLET)	4PA4083-6025G1	
30	EXIT ROLLER ASSY	2PA4120-1129G1	
31	RELEASE GUIDE ASSY	2PA4120-1085G1	
32	RELEASE SPRING	4PP4120-1087P1	
33	LED HEAD	4YA4116-1115G2	
34	CONNECTOR	224A1286P0140	
35	LED CABLE ASSY	4YX4120-1124G1	
36	SCREW	T2P4-12-HHC	
37	SCREW	4PB4013-3104P5	
38	SCREW	+BTD3-8-IOF	
39	SCREW	4PB4083-2500P10	
40	SCREW	4PB4013-3100P25	
41	SCREW	4PB4083-2500P8	
42	SENSOR WIRE ASSY	4PA4120-1170G1	
43	WASHER B	4PP4120-1209P1	
44	WASHER C	4PP4120-1210P1	

ZEICHNUNG 4: BASE ASSY

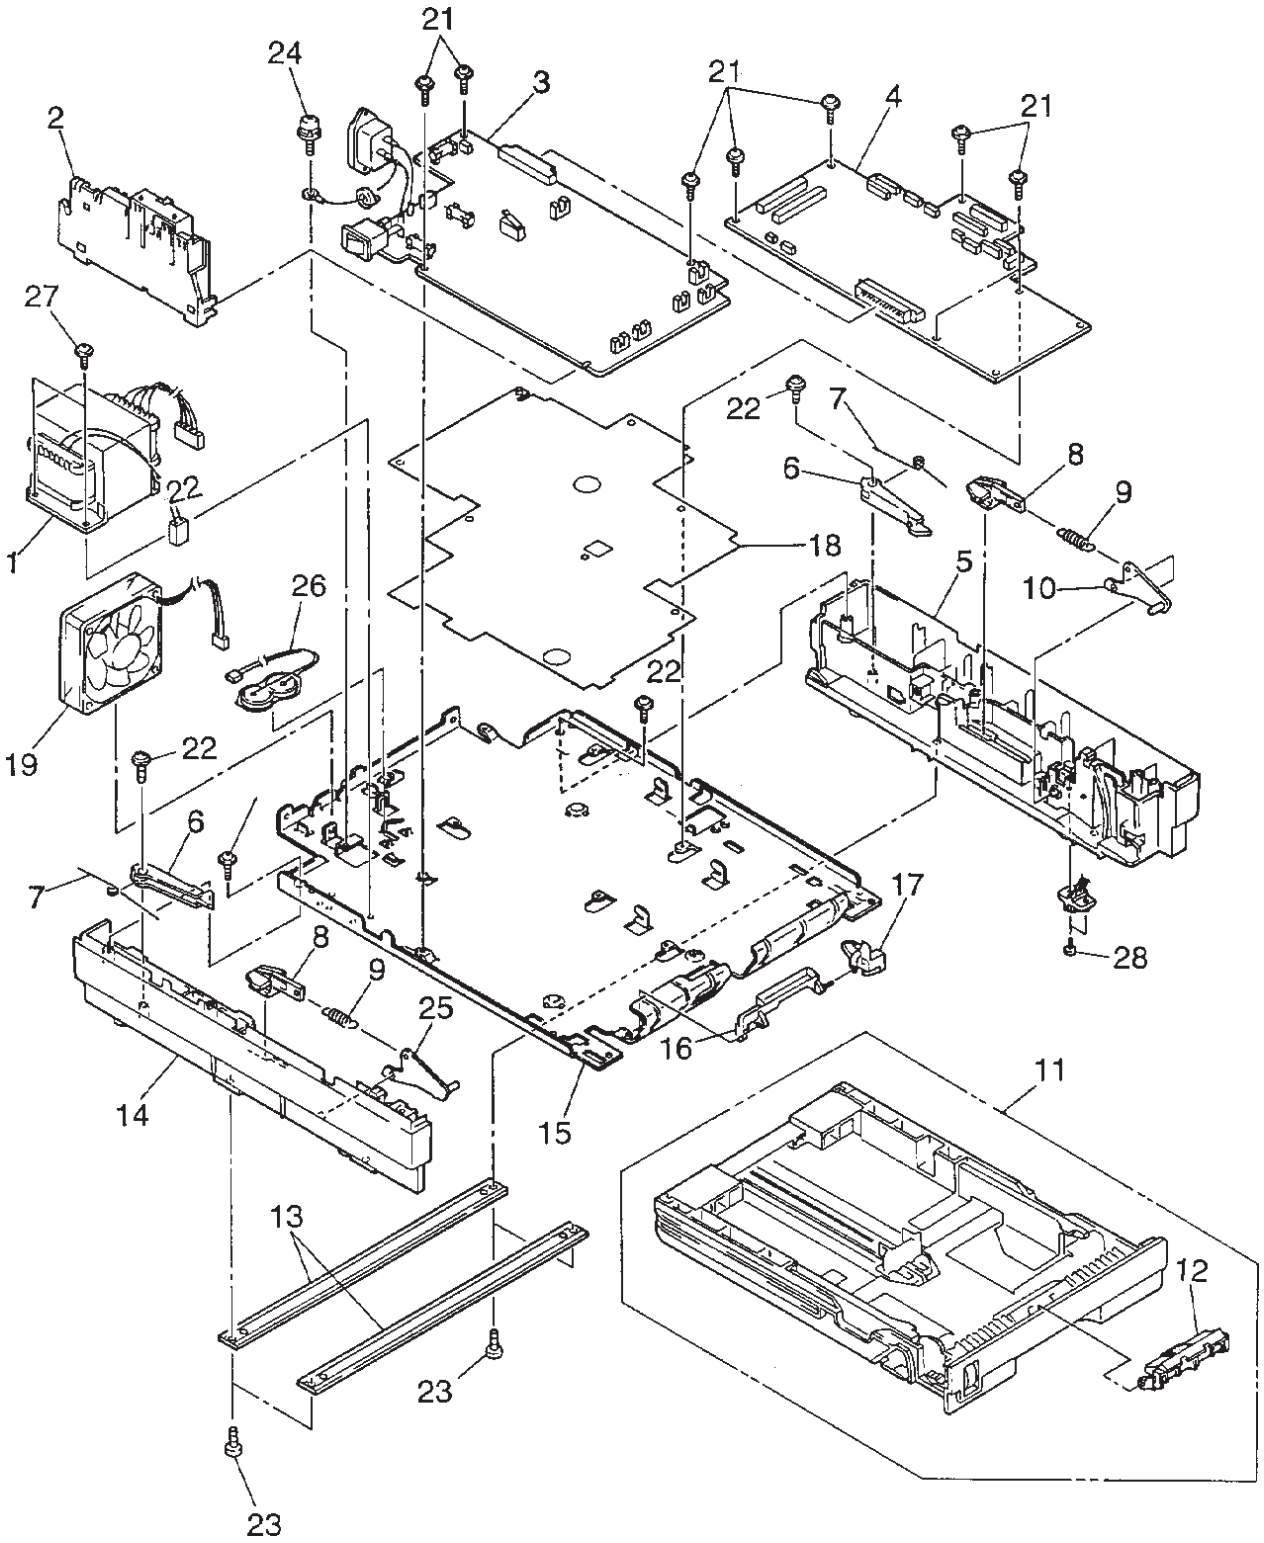

LISTE 4: BASE ASSY

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	TRANSFORMER	4YB4049-7033P2	FX050
	TRANSFORMER	4YB4049-7083P1	FX151/FX175
2	CONTACT ASSY	3PA4083-6090G1	
3	POWER SUPPLY UNIT	4YA4049-7109G2	
4	MAIN PCB R050	4YA4134-1031G1	FX050
	MAIN PCB M175	4YA4135-1031G11	FX151
	MAIN PCB M175-2	4YA4135-1031G12	FX175
5	CASSETTE GUIDE ASSY (R)	3PP4083-7671G1	
6	CASSETTE LOCK LEVER	3PP4083-7653P1	
7	CASSETTE LOCK SPRING	4PP4083-7655P1	
8	LINK PULL BLOCK	4PP4122-1170P1	
9	SHEET SPRING	4PP4083-7666P1	
10	SHEET LINK (R)	4PP4083-7658G1	
11	PAPER CASSETTE ASSY	1PA4120-1162G1	
12	SEPARATION FRAME ASSY	40259701	
13	BEAM	3PP4083-7660P1	
14	CASSETTE GUIDE ASSY (L)	3PP4083-7670G1	
15	BASE PLATE SUB ASSY	1PA4120-1158G1	
16	CASSETTE SENSOR PLATE	3PP4083-6154P1	
17	SENSOR PLATE (SUPPLY PAPER)	4PP4083-7667P1	
18	INSULATOR	2PB4120-1103P1	
19	DC FAN MOTOR	4YB4120-1119P1	
20	DUMMY PLATE	4PP4120-1100P1	FX050
21	SCREW	4PB4013-3102P2	
22	SCREW	4PB4083-2500P10	
23	SCREW	+T2P3-8-HHC-V	
24	SCREW	+P(SW+W)4-6-HHC	
25	SHEET LINK (L)	4PP4083-7657G1	
26	BATTERY	4YB4120-1094P1	
27	SCREW	+BTD3-8-IOF	
28	SCREW	+TP2.6-8-HHC	

ZEICHNUNG 5: SCAN UNIT

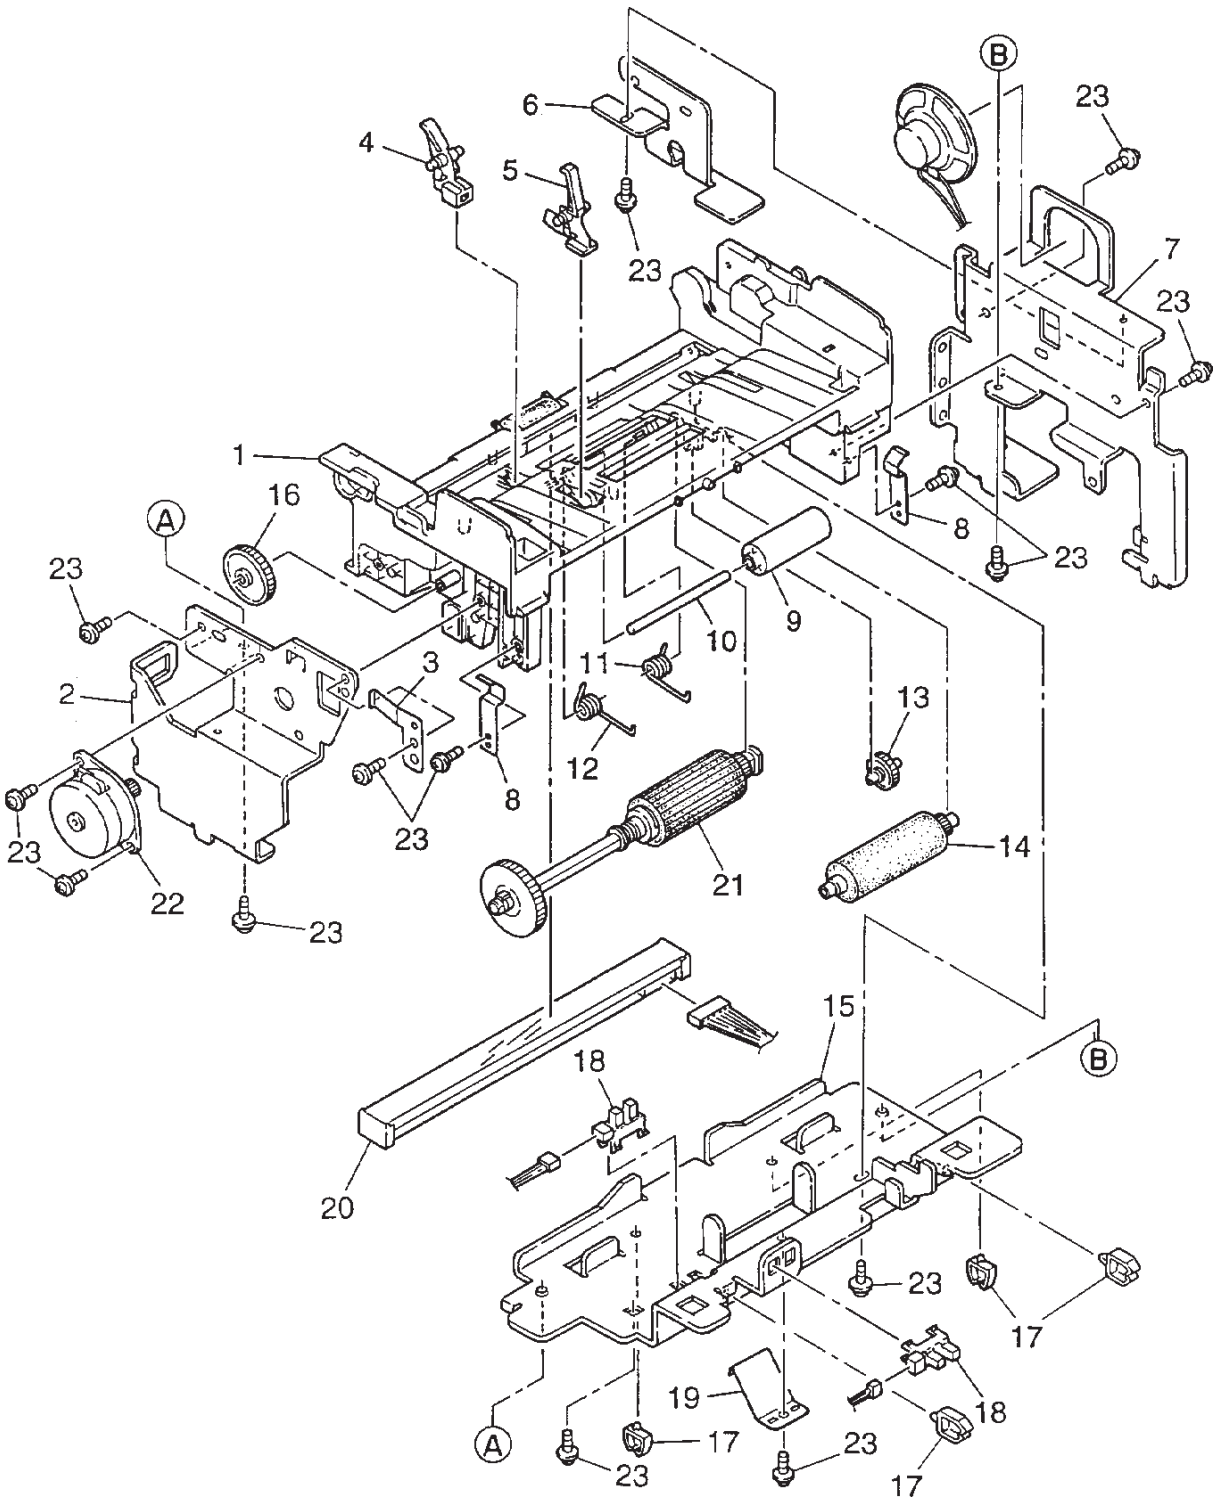

LISTE 5: SCAN UNIT

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	SCANNER FRAME SUB ASSY	2PA4120-1160G1	
2	SCANNER BASE (L)	2PP4120-1034P1	
3	EARTH PLATE ADF	4PP4120-1023P1	
4	PC2 LEVER	3PP4120-1017P1	
5	PC1 LEVER	3PP4120-1016P1	
6	POCKET PLATE	3PP4120-1038P1	
7	SCANNER BASE (R)	2PP4120-1037P1	
8	LATCH SPRING	4PP4120-1032P1	
9	PINCH ROLLER	4PP3529-5045P1	
10	PINCH ROLLER SHAFT	4PP4120-1020P1	
11	PINCH SPRING R	4PP4120-1022P1	
12	PINCH SPRING L	4PP4120-1021P1	
13	GEAR (Z20)	4PP3529-5033P1	
14	SUB ROLLER ASSY	4PA3529-5082G1	
15	SCANNER BOTTOM PLATE	2PP4120-1029G1	
16	GEAR (Z81/15)	4PP3529-5039P1	
17	MINI CLAMP	4PB3527-5803P1	
18	PHOTO SENSOR	4YB4120-1137P1	FX050
19	SCANNER SPRING	4PP4120-1030P1	
20	CONTACT IMAGE SENSOR	4YB4120-1121P1	
21	ADF ROLLER ASSY	3PA4120-1018G1	
22	S MOTOR	4YB4120-1035P1	FX050
	S MOTOR	4YB4120-1036P1	FX151/FX175
23	SCREW	+BTD3-8-IOF	

ZEICHNUNG 6: PAPER GUIDE U ASSY

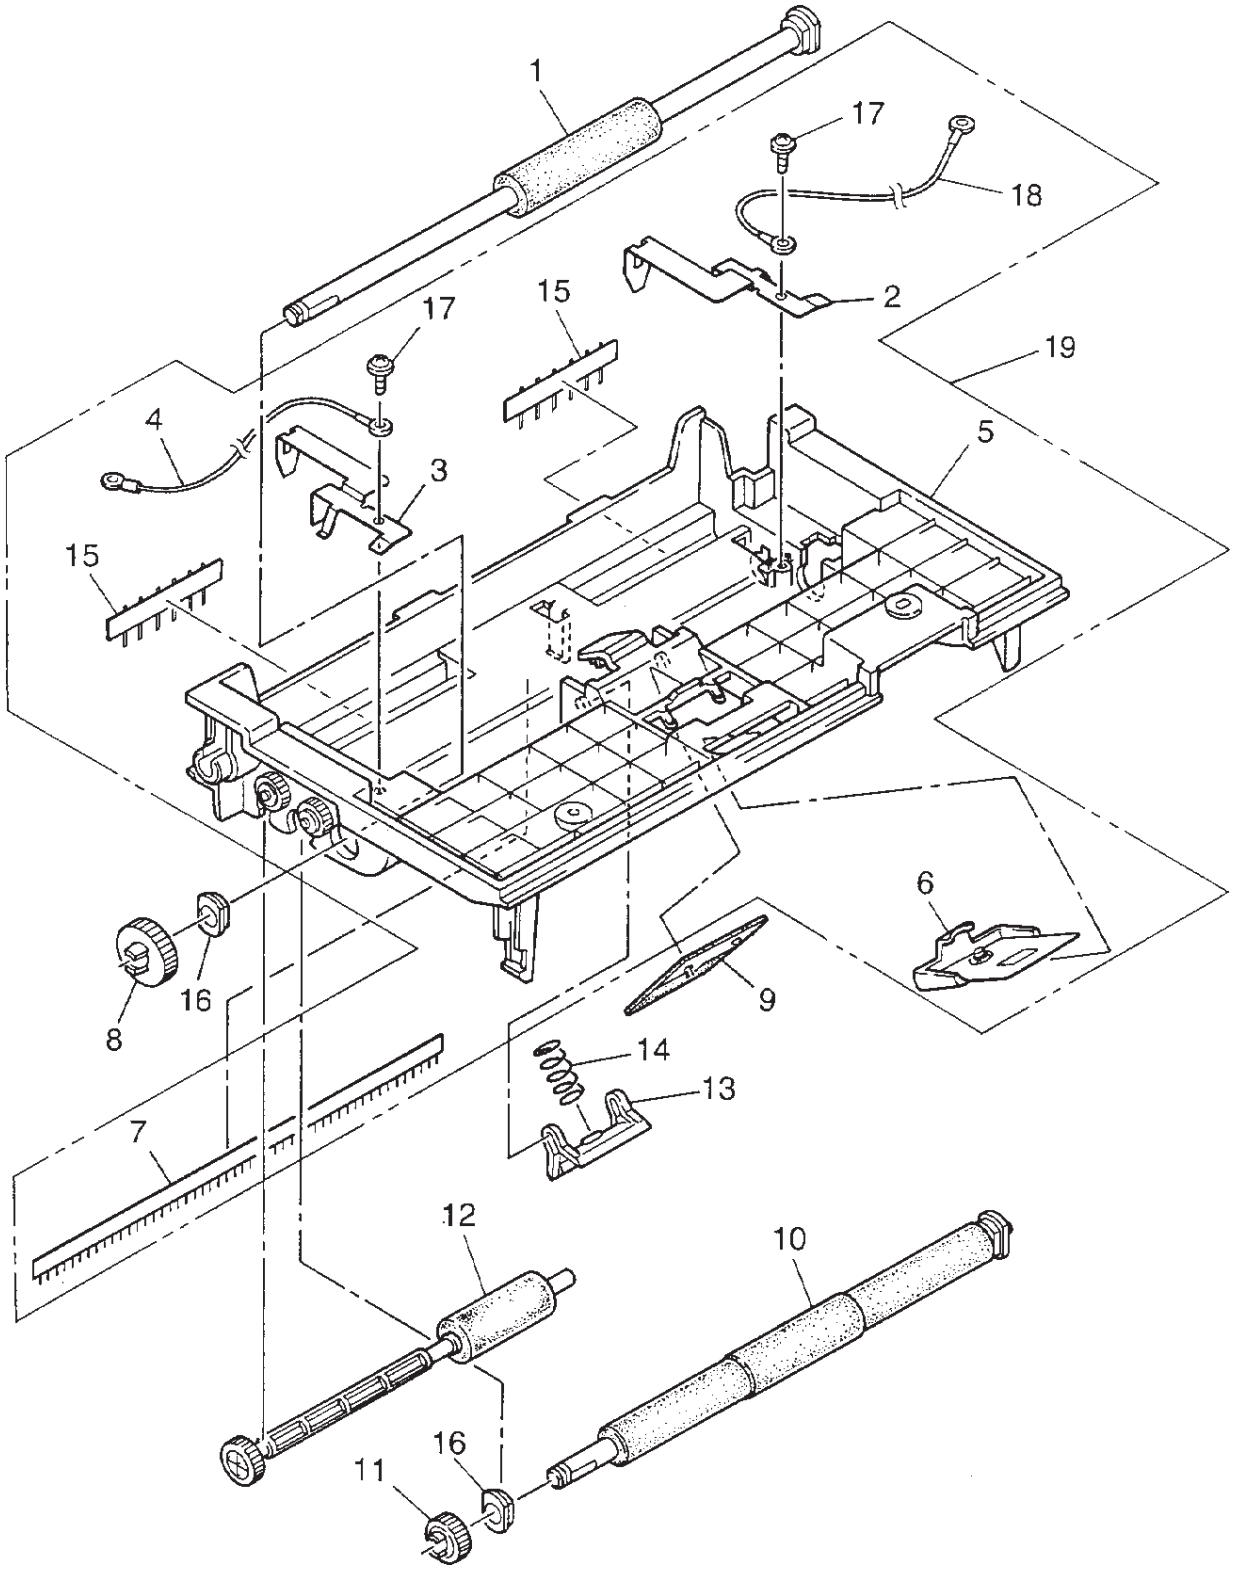

LISTE 6: PAPER GUIDE U ASSY

NR.	BEZEICHNUNG	BESTELL-NR.
1	FEED ROLLER ASSY (1)	3PA4120-1045G1
2	EARTH PLATE (SR)	4PP4120-1047P1
3	EARTH PLATE (SL)	4PP4120-1048P1
4	EARTH CODE	4YS4011-1714P2
5	PAPER GUIDE SUB ASSY (U)	2PA4120-1159G1
6	PINCH PLATE ASSY	4PA4120-1041G1
7	ELECTRICAL DISCHARGE BRUSH	4PB4120-1051P1
8	GEAR (Z28)	4PP3529-5035P1
9	SEPARATION RUBBER ASSY	4PA3529-5087G1
10	SENSOR ROLLER ASSY	3PA4120-1049G1
11	GEAR (Z22)	4PP3529-5034P1
12	EXIT ROLLER ASSY	3PA4120-1052G1
13	BACK-UP PLATE	4PP3527-5153P1
14	ADF SPRING	4PP4120-1044P1
15	ELECTRICAL DISCHARGE BRUSH	4PB4120-1051P2
16	BEARING	4PP3522-3568P1
17	SCREW	+BTD3-8-IOF
18	EARTH CODE	4YS4011-1714P3
19	PAPER GUIDE FRAME ASSY	2PA4120-1213G1

ZEICHNUNG 7: CABLES

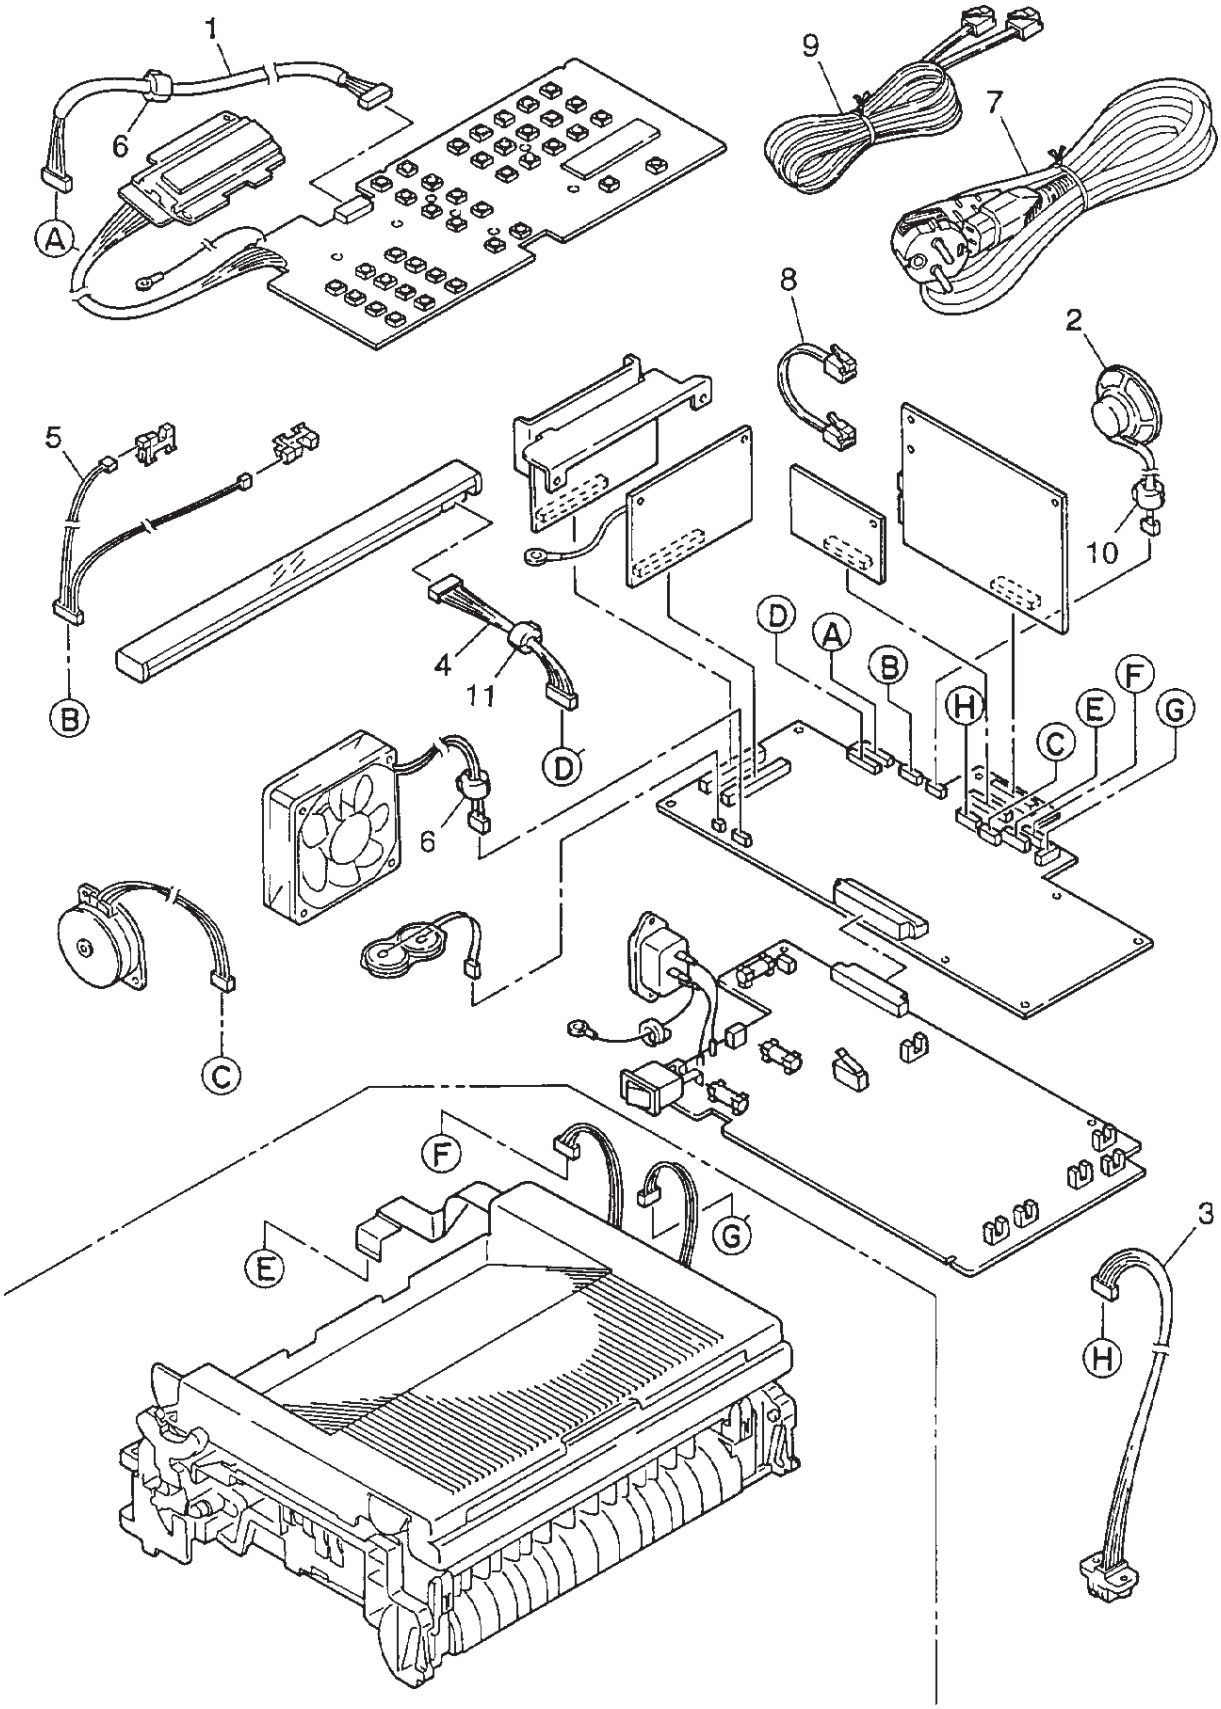

LISTE 7: CABLES

NR.	BEZEICHNUNG	BESTELL-NR.	BEMERKUNG
1	CONNECTOR CODE	4YS4111-3440P1	
2	SPEAKER	4YB4120-1026P1	
3	CONNECTOR CODE (2ND TRAY)	3YS4111-3527P1	FX151/FX175
4	PWA CONNECTOR CODE	4YS4111-3441P1	
5	PWA CONNECTOR CODE	4YS4111-3442P1	
6	FERRITE CORE	105A1070C0001	
10	FERRITE CORE	105A1051C1003	
11	FERRITE CORE	105A1070C0003	